


<b>Title:</b>	How to configure HIK intercom	<b>Version:</b>	v1.4	<b>Date:</b>	20/02/2019
<b>Product:</b>	Intercom			<b>Page:</b>	1 of 7

## Preparation

1. Latest iVMS-4200 version
2. Download link: <https://www.hikvision.com/au-en/Support/Downloads/Client-Software>
3. Upgrade the firmware to the latest before you start to program it. The latest firmware is V1.5.0build190220

## How to configure HIK intercom(Apartment system)

### 1. Wiring all the devices as per below. (It is just a schematic diagram)

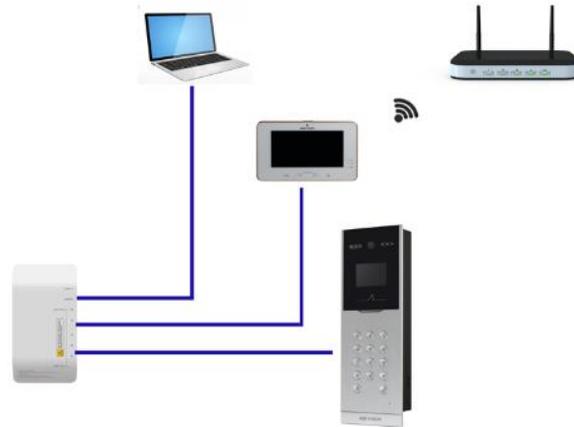

### 2. Using iVMS-4200 to add door station via TCP/IP and program it

- 1) Open iVMS-4200, and then activate the device first.  
Modify the Netinfo to same LAN of the laptop.

Online Device (8)				
IP	Device Type	Firmware Version	Security	Server Port
192.0.0.64	DS-KM8301	V1.5.0build 180925	Inactive	8000
192.0.0.65	DS-KD8102-V	V1.5.0build 180925	Inactive	8000

Online Device (8)				
IP	Device Type	Firmware Version	Security	Server Port
192.0.0.71	DS-KH6310-W	V1.5.0build 180925	Active	8000
192.0.0.80	DS-KD8102-V	V1.5.0build 180925	Active	8000

- 2) Add the device to the software client.

<b>Title:</b>	How to configure HIK intercom	<b>Version:</b>	v1.4	<b>Date:</b>	20/02/2019
<b>Product:</b>	Intercom			<b>Page:</b>	2 of 7

Online Device (8)

IP	Device Type	Firmware Version	Security	Server Port
192.0.0.71	DS-KH6310-W	V1.5.0build 180925	Active	8000
192.0.0.80	DS-KD8102-V	V1.5.0build 180925	Active	8000

- 3) Once the device has been added, then click 'Remote Configuration'.

Device for Management (1)

Device Type	Nickname	Connectio...	Network Paramet...	Device Serial No.
Door Station	Front door station	TCP/IP	192.0.0.80:8000	DS-KD8102-V0120180516WR214401027CLU

- 4) Select 'Time' and set up the time zone, NTP, DST accordingly.

Remote Configuration

Configuring the Time Settings (e.g., NTP)

**Time Zone**

Select Time Zone: (GMT+10:00) Canberra, Guam, Melbourne, Syd... ▾

**Enable NTP**

Server Address:

NTP Port:

Sync Interval:  Minute(s)

**Enable DST**

Start Time: April ▾ First Week ▾ Sun ▾ 2 :00

End Time: October ▾ Last Week ▾ Sun ▾ 2 :00

DST Bias: 60 min ▾

**SDK Synchronization**

Synchronization

### 3. Using iVMS-4200 to set up indoor station


- 1) Select the indoor station in the iVMS-4200 and then click on 'Add to Client'.

Online Device (8)


IP	Device Type	Firmware Version	Security	Server Port
192.0.0.66	DS-KV8202-IM	V1.5.0build 180925	Active	8000
192.0.0.70	DS-KH6310-W	V1.5.0build 180925	Active	8000

- 2) Go to remote configuration and set up the "time" for the indoor station as well.

<b>Title:</b>	How to configure HIK intercom	<b>Version:</b>	v1.4	<b>Date:</b>	20/02/2019
<b>Product:</b>	Intercom			<b>Page:</b>	3 of 7

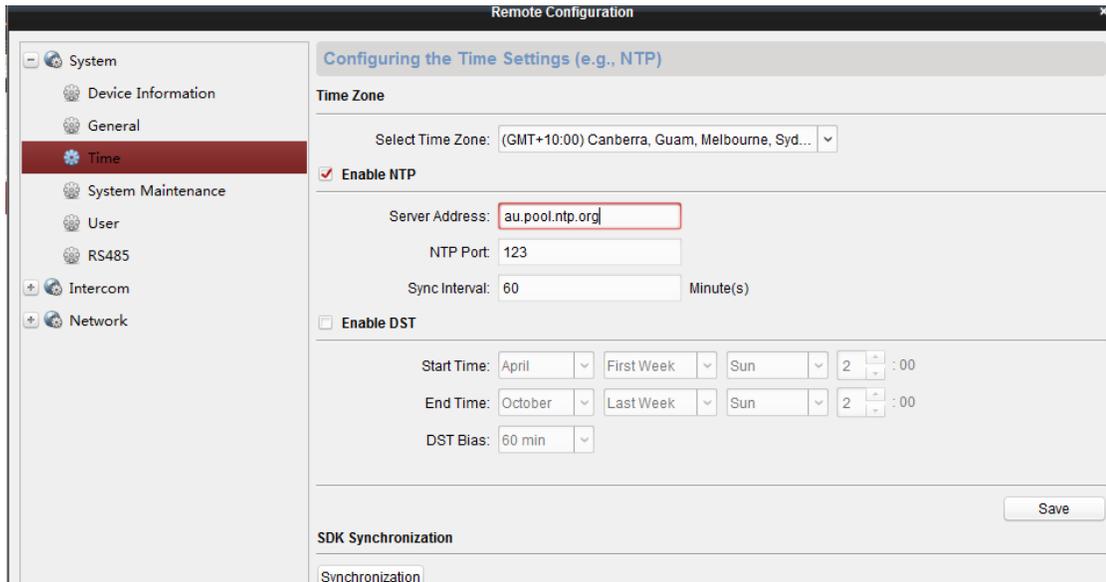


- 3) Select 'Intercom' > 'ID Configuration' from the left side menu and then enter in the room number that was used while setting up the door station. Then click save. Floor NO is for lift control use only. If there is no HIK lift controller in the system, you don't need to set up the floor NO here.

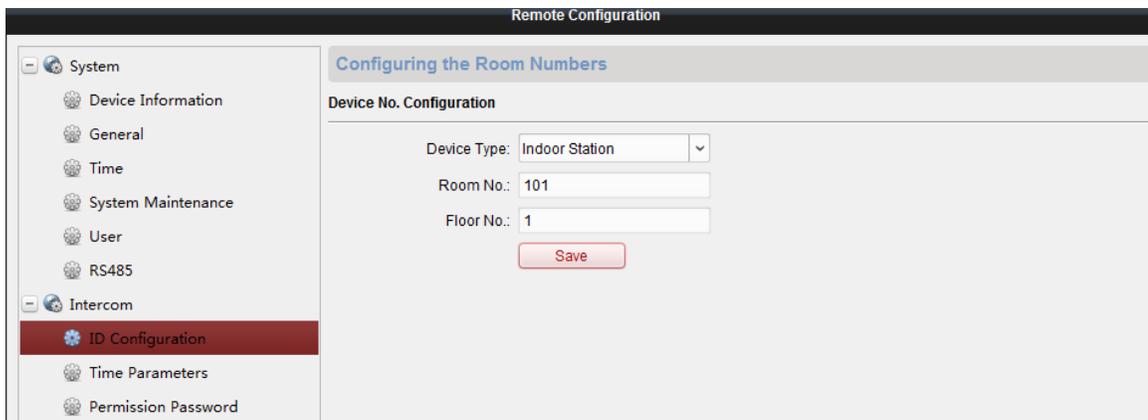

- 4) Select 'Network' > 'Linked Network Configuration' from the left side menu, and then enter in the door station IP address.  
Change the 'Main Door Station Type' to 'Main Door Station (D Series)'. Because "V" means villa door station .And "D" means apartment door station.  
Then click Save.


<b>Title:</b>	How to configure HIK intercom	<b>Version:</b>	v1.4	<b>Date:</b>	20/02/2019
<b>Product:</b>	Intercom			<b>Page:</b>	4 of 7

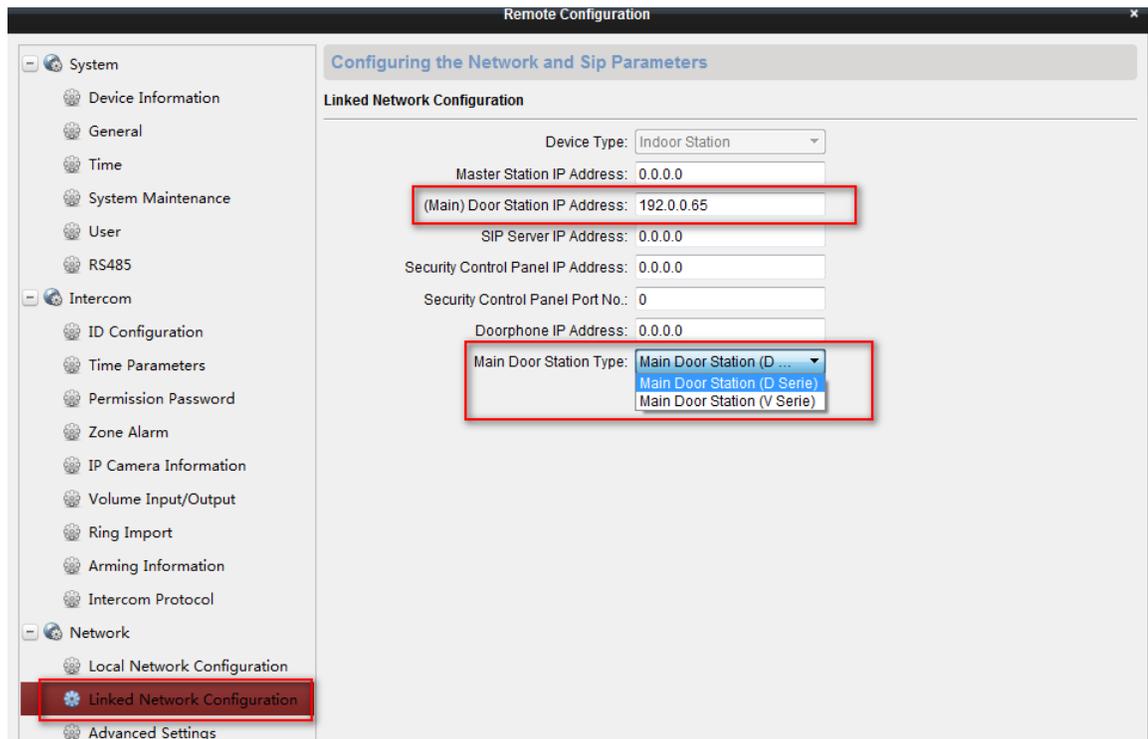

5) The room station is now setup and the room station will now ring when someone press “101” in the door station.

#### 4. Setting up APP connection

- 1) Search and download the APP ”HIK-Connect ”
- 2) Before adding the device to APP, run a hardwired cable from the Lan port of video distributor to the router, or enable the Wi-Fi of the indoor station. Make sure that indoor is able to get access to internet. Wi-Fi connection schematic layout as per below.

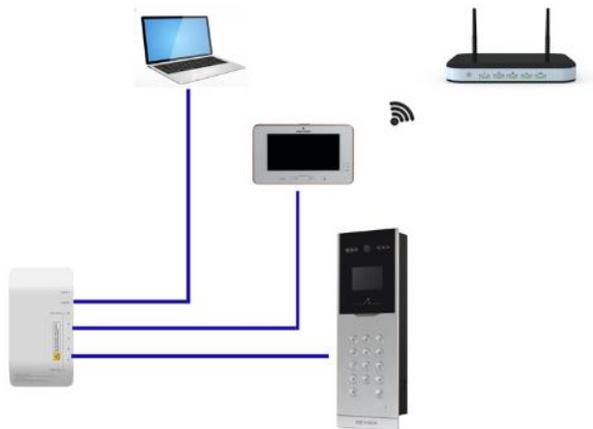

- 3) Go to the APP “HIK-Connect”, there is “plus” button in the home page. Press it and then choose “scan QR Code” or “Manual Adding” to add the device.

<b>Title:</b>	How to configure HIK intercom	<b>Version:</b>	v1.4	<b>Date:</b>	20/02/2019
<b>Product:</b>	Intercom			<b>Page:</b>	5 of 7




- 4) In the back of indoor station, there is a “SN” number and also QR code(only the model with “W” would have the QR code). QR code is for scanning to add. SN is for manual adding




- 5) Here we use manual adding. Input the SN number and then press the button on the top right corner to continue.

<b>Title:</b>	How to configure HIK intercom	<b>Version:</b>	v1.4	<b>Date:</b>	20/02/2019
<b>Product:</b>	Intercom			<b>Page:</b>	6 of 7

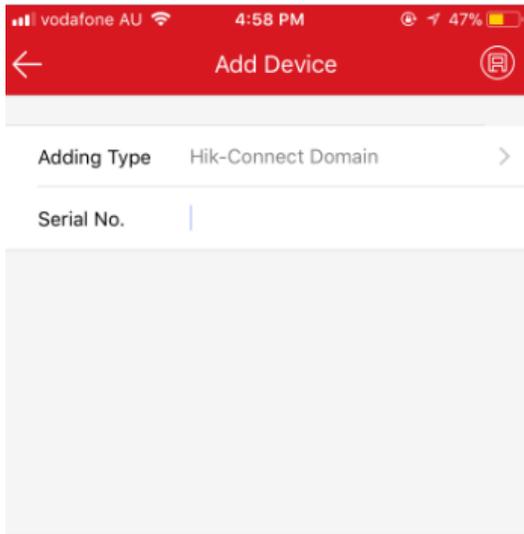

6) Press “add” to finish adding room station to the APP.

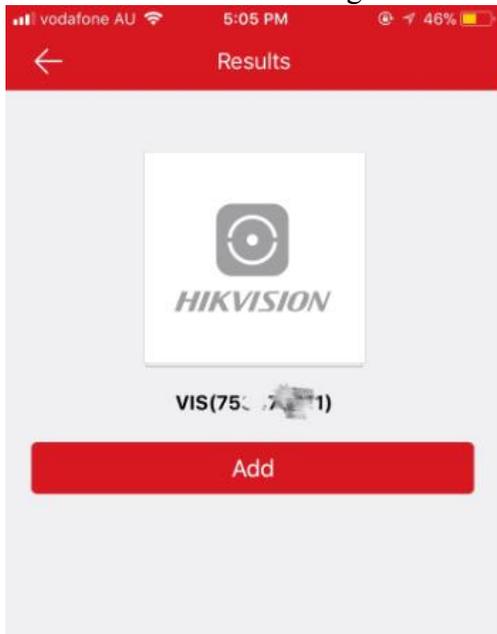



<b>Title:</b>	How to configure HIK intercom	<b>Version:</b>	v1.4	<b>Date:</b>	20/02/2019
<b>Product:</b>	Intercom			<b>Page:</b>	7 of 7

**First Choice for Security Professionals**  
***HIKVISION* Technical Support**